


Артикул	Ось	Применимость
KWAN0001	Передняя	FORD C-MAX 03-07 / FOCUS II 04 →
KWAN0002	Передняя	A1 (8X) / A3 (8P1) / Q3 (8U) Octavia II
KWAN0003	Задняя	VW Golf V-VI / Skoda Octavia 04 →
KWAN0004	Задняя	Chevrolet Aveo 05 → / Kalos 03 →
KWAN0005	Передняя	A3 (8P) (8V) / Q2 (GA) / Q3 (F3B) Karoq
KWAN0006	Передняя	Mazda 3 13 → / 6 12 → / CX-5 12 →
KWAN0007	Задняя	A3 (8L) Octavia I / Roomster (5J7) Bora
KWAN0008	Задняя	Nissan X-TRAIL / SERENA / T32R Nc26
KWAN0009	Задняя	<b>(ABS)</b> HYUNDAI ELANTRA / i30 / KIA CEED / PRO 06 →
KWAN0010	Задняя	Hyundai Sonata VI 09-14 / KIA Optima 12-16
KWAN0011	Передняя	<b>(ABS)</b> Toyota Auris / Corolla 02 →
KWAN0012	Задняя	VAG A3 03 → / Karoq 17 → / Octavia III 12 → / Golf V-VI 03 →
KWAN0013	Задняя	HYUNDAI ACCENT II 1.3 / 1.5 / 1.5 CRDi / 1.6 99-05
KWAN0014	Передняя	<b>(ABS)</b> OPEL ASTRA-J 09 →
KWAN0015	Задняя	<b>(ABS)</b> CHEVROLET EVANDA / LACETTI / NUBI A
KWAN0016	Передняя	<b>(ABS)</b> Astra G / Zafira A
KWAN0017	Задняя	<b>(ABS)</b> d152 TOYOTA RAV4 III (A30)
KWAN0018	Задняя	SKODA RAPID 13-18 / ROOMSTER 11-15
KWAN0019	Задняя	<b>(ABS)</b> Ford Mondeo III 00-07
KWAN0020	Передняя	<b>(ABS)</b> VW POLO (9N_) SKODA FABIA I (6Y2)
KWAN0021	Задняя	<b>(ABS)</b> HYUNDAI GETZ 02 → / KIA RIO / PICANTO 05 →
KWAN0022	Передняя	CHEVROLET CRUZE / OPEL ASTRA J / ZAFIRA 09 → (R16)
KWAN0023	Задняя	<b>(ABS)</b> d=139 HYUNDAI Creta 16 →
KWAN0024	Задняя	MAZDA 6 (GH) / MAZDA CX-7 02.2008 →
KWAN0025	Задняя	<b>(ABS)</b> OPEL ASTRA 92-96 / VECTRA B 95-96
KWAN0026	Задняя	<b>(ABS)</b> правая TOYOTA CAMRY (V30/V40) 24 VVTi / 30V6
KWAN0027	Задняя	<b>(ABS)</b> 5 отв. OPEL ASTRA G / OPEL MERIVA
KWAN0028	Передняя	<b>(ABS)</b> VW Polo Sedan RU 10 → / SKODA RAPID 12 →
KWAN0029	Передняя	Hyundai ix55 08 → / Santa Fe I-III 05 →
KWAN0030	Передняя	<b>(ABS)</b> NISSAN QASHQAI 07 → / X-TRAIL 07 →
KWAN0031	Передняя	<b>(ABS)</b> Opel Astra H 04 → / Zafira 05 →
KWAN0032	Передняя	<b>(ABS)</b> AUDI A3 03 → / SKODA OCTAVIA 05 →
KWAN0033	Задняя	<b>(ABS)</b> SKODA RAPID 12 → / VWPOLO SEDAN 09 →
KWAN0034	Задняя	<b>(ABS)</b> Hyundai Solaris 10 → / KIA Rio III 11 →
KWAN0035	Передняя	<b>(ABS)</b> TOYOTA Auris 07 → / Corolla 150 07 →

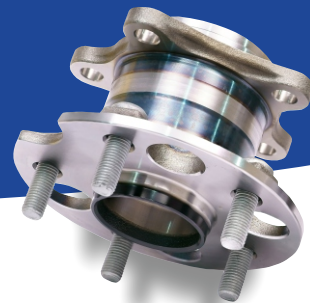

Артикул	Ось	Применимость
KWAN0036	Задняя	<b>(ABS)</b> FORD FOCUS II 04 → / C-MAX 03-10
KWAN0037	Передняя	HYUNDAI i30 12 → / KIA Ceed 12 →
KWAN0038	Задняя	MITSUBISHI OUTLANDER III 12 → / ASX 12 →
KWAN0039	Задняя	<b>(ABS)</b> NISSAN Qashqai 07 → / X-Trail 07 →
KWAN0040	Задняя	<b>(ABS)</b> CHEVROLET CRUZE 09 → / OPEL ASTRA J 09 →
KWAN0041	Задняя	<b>(ABS)</b> HYUNDAI ACCENT II (LC) 00-05
KWAN0042	Передняя	<b>(ABS)</b> BMW X5 E70 07 → / X6 E71 08 →
KWAN0043	Передняя	<b>(ABS)</b> FORD Mondeo IV 07 → / Focus II 04 →
KWAN0044	Передняя	<b>(ABS)</b> MAZDA 3 (BK) 03 →
KWAN0045	Передняя	<b>(ABS)</b> TOYOTA Lnad Cruiser Prado 120 02 →
KWAN0046	Передняя	CHEVROLET Lanos / Chance
KWAN0047	Задняя	<b>(ABS)</b> VW Polo 01 → / SKODA Fabia 99 → / AUDI A1 10
KWAN0048	Передняя	<b>(ABS)</b> NISSAN X-Trail 2.0i / 2.5i / 1.6dCi 14 →
KWAN0049	Задняя	<b>(ABS)</b> MAZDA 3 (BK)03 → / 5 (CR) 05 →
KWAN0050	Передняя	HYUNDAI Accent III (MC) / Solaris (RB)
KWAN0051	Передняя	<b>(ABS)</b> OPEL ASTRA G / ZAFIRA A 98 →
KWAN0052	Задняя	<b>(ABS)</b> KIA CERATO / SPECTRA 08 →
KWAN0053	Задняя	<b>(ABS)</b> OPEL ASTRA H 04 → / ZAFIRA B 05 →
KWAN0054	Передняя	<b>(ABS)</b> AUDI A6 / ALLROAD / A8 3.2 / 5.0 / 6.0 04 / 02 →
KWAN0055	Передняя	RENAULT Logan / Sandero / Stepway
KWAN0056	Задняя	<b>(ABS)</b> MITSUBISHI ASX FWD 10 → / Lancer X 07 →
KWAN0057	Передняя	HYUNDAI Accent / Getz / Solaris / i20 99 →
KWAN0058	Задняя	<b>(ABS)</b> ELANTRA 01-06 / KIA SPECTRA 05-09
KWAN0059	Передняя	HYUNDAI-KIA Tucson (JM) / Sportage (SL)
KWAN0060	Задняя	<b>(ABS)</b> MAZDA 3 (BM ) 13-19
KWAN0061	Задняя	TOYOTA RAV 4 II 4WD 00-05
KWAN0062	Передняя	<b>(ABS)</b> OPEL SIGNUM 03 → / VECTRA C 02 →
KWAN0063	Задняя	<b>(ABS)</b> MAZDA PREMACY 99 →
KWAN0064	Передняя	<b>(ABS)</b> NISSAN Qashqai 1.2Tce / 1.5dCi / 1.6dCi 14 →
KWAN0065	Задняя	DAEWOO Nexia
KWAN0066	Задняя	<b>(ABS)</b> AUDI A6 B5 97 → кроме Quattro / VW PASSAT B5
KWAN0067	Задняя	<b>(ABS)</b> TOYOTA CAMRY (V10) 91-96 / Camry (V20) 96-01
KWAN0068	Передняя	CHEVROLET Lanos / Chance / Nexia
KWAN0069	Передняя	<b>(ABS)</b> VW Golf2 / Golf3 / Passat B3